

FEEL THE HEAT!

RacePace Intrusion Bar for Maverick X3

Part # **01-2916 / 2917** Maverick X3 - All Models Black / Red

Congratulations on your purchase of the DragonFire RacePace Intrusion Bar. The Intrusion Bar is a great addition to the OEM roll cage of the Maverick X3. Attaching at 4 points, the Intrusion Bar provides protection from intruding objects and gives your vehicle an aggressive style. Be sure to check out the full line of DragonFire Accessories for your CanAm vehicle at your local authorized dealer or online at <http://www.DragonFireRacing.com>



- Read and understand these instructions before installing product
- This product does not provide roll over protection
- This product may inhibit line of sight in some instances
- Do not use product if there are any signs of damage


Disclaimer

Off road activities can be hazardous and could lead to injury, dismemberment, paralysis and death. No warranty of representation is made as to the products ability to protect the user from any injury or death. The user assumes that risk. The acceptance and /or use of this merchandise purchased from DragonFire by the customer hereby shall release DragonFire from any and all liability pertaining to the use of such merchandise.

Pre-installation: Lay out components and compare to list and images.

| Part & Hardware List | | | | | |
|----------------------|-----|----------|--------|--------------------------------|-----------|
| ITEM | QTY | SIZE | LENGTH | TYPE | STEP USED |
| P1 | 1 | - | - | Intrusion Bar - Driver Side | 4 & 6 |
| P2 | 1 | - | - | Intrusion Bar - Passenger Side | 4 & 5 |
| P3 | 24 | 5/16"-24 | 1" | Socket Head Cap Screw | 7 & 8 |
| P4 | 2 | 5/16"-18 | 3/4" | Socket Head Cap Screw | 6 |
| P5 | 4 | - | - | Cable Tie | 10 & 15 |

| Tools Required |
|--------------------|
| 1/4" Hex Head Bit |
| Ratchet |
| Sharp Cutting Tool |

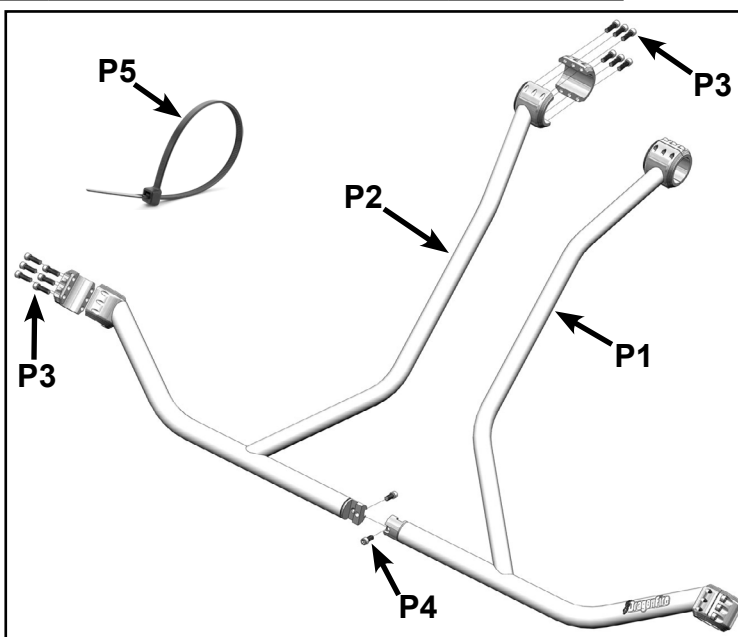

Note: An assistant is needed to hold the product in place during installation.

Step 1: Place vehicle on a flat and level surface. Place gear selector in "Park" and remove keys from the ignition.

Vehicle with No CanAm Windshield (Polycarbonate): Go to Step 2

Vehicle With CanAm Windshield (Polycarbonate): Uninstall per manufacturer installation instructions and then continue on Step 2.

Step 2:

Vehicle With CanAm Sport Roof (Plastic): Continue on Step 3.


Vehicle with No CanAm Sport Roof: Go to Step 4.

Step 3: Uninstall the 2 quarter turn screws and Velcro straps in the front of the roof. Retain screws for later use. Push the front of the roof to detach it from the cage. (Figure A)

Step 4: Remove the clamp halves and hardware from the Intrusion Bar (P1 & P2). Retain all components and hardware.

Step 5: Place the Intrusion Bar - Passenger Side (P2) onto the A-pillar of the vehicle. (Figure B)

Step 6: Place the Intrusion Bar - Driver Side (P1) onto the vehicle. Loosely install 2 short 5/16" bolts (P4) to the middle bottom of the Intrusion Bar to lock both halves in position. (Figure C)

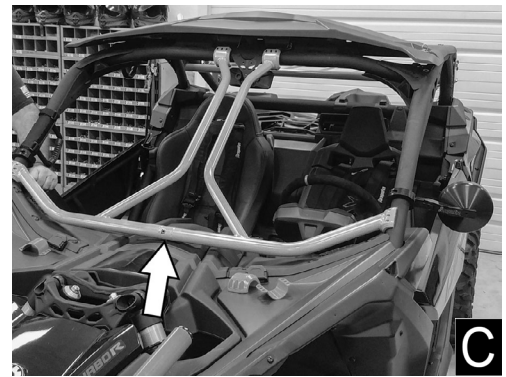

Step 7: Loosely install the clamp halves to both sides of intrusion bar. (Figure D)

Step 8: Loosely install clamp halves to the top mounts of Intrusion Bar. (Figure E)

Step 9: Tighten Intrusion Bar to desired alignment and then torque all hardware to 12 ft-lbs.

Step 10:

A - No Roof & CanAm Windshield: Go to Step 18.



B - With Roof & No CanAm Windshield: Lock the roof into position and then reinstall the 2 quarter turn screws in the front of the roof. Install supplied cable ties [P5] where velcro straps were removed. Tighten cable tie and trim any excess cable for a clean look. (Figure F) Then continue on Step 18.

C - With Roof & CanAm Windshield: Follow instructions for cutting out windshield; install windshield per manufacturer installation instructions. Do not install factory windshield clamp into the 2 bottom square holes where they interfere with Intrusion Bar clamps. (Figure G)



Step 11: Using the square hole, measure a length of 2-5/8" and then draw the region to be cut as shown in Figure H.

Step 12: Cut out the region. (Figure I) Then measure 3/4" perpendicular to the edge of the cut-out.

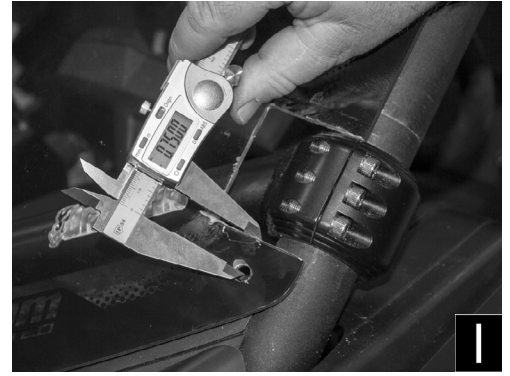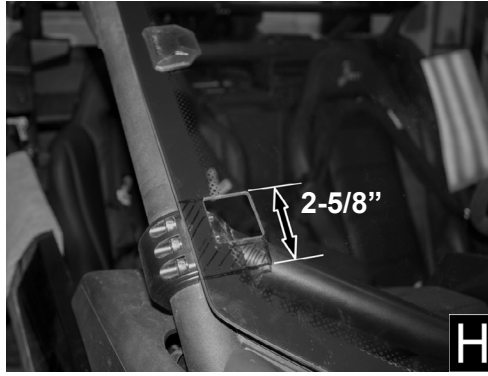

Step 13: Measure 1" in from outside edge of the windshield as shown in Figure J.

Step 14: Drill a 1/2" hole at the location. (Figure K)

Step 15: Install supplied cable tie (P5) into hole and around frame. Tighten cable tie and trim any excess cable for a clean look. (Figure L)



Step 16: Using the distance between the inside of the upper clamps of the Intrusion Bar as a guide, measure approximately 5". (Figure M)

Step 17: Cut the windshield around the upper clamps. (Figure N) Then go to Step 10-B for roof install instructions.

Step 18: This completes installation. Time to ride and enjoy!

ProTip: Periodically check all hardware and re-tighten if needed.

For further assistance please contact us at
customerservice@dragonfireracing.com or 1-800-708-9803.

