


Polaris Pro XP Tree Bar Installation

- 1. Remove skid plate.
- 2. Install frame mounts (see picture for assembly order):

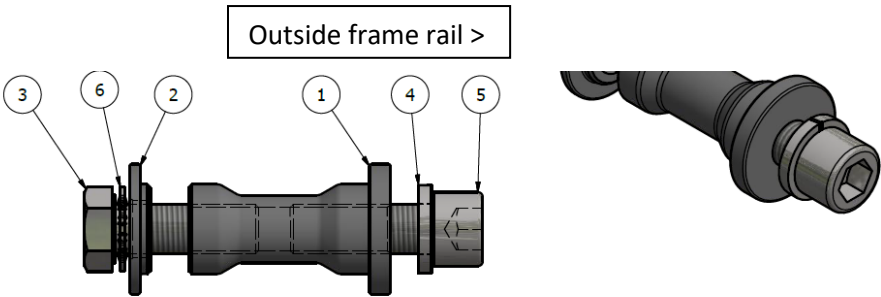

			PARTS LIST	
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	1	453010	Threaded Mount	
2	1	453011	Threaded Mount Backing Plate	
3	1	FM-HEXB-M12x1.25X35-CZ-10.9	Hex-Head Bolt	
4	1	FM-LKWH-12-CZ-10.9	Split Lock Washers	
5	1	FM-SHCS-M12x1.25X35-CZ-10.9	Socket Head Cap Screws, DIN 912, Clear Zinc, 10.9 Grade	
6	1	453013	18-8 STAINLESS STEEL INTERNAL-TOOTH LOCK WASHER	

- 3. Reattach skid plate.
- 4. Using M10 and M6 SHCS bolts connect the front and rear portion of the tree bar.
- 5. Place rock slider and tree bar onto frame mounts and secure with 4 & 5 (see above picture).
- 6. Attach HR trim piece using M6 bolts and nuts.